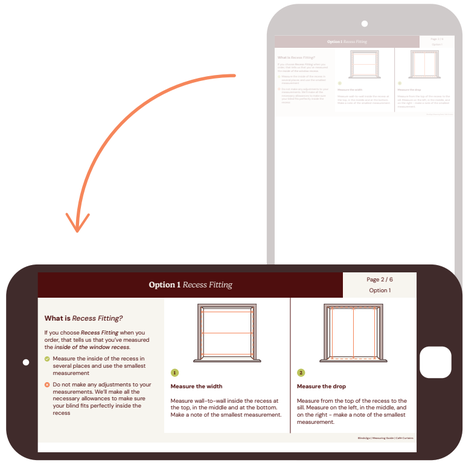



Turn your phone or tablet

Our guides are best viewed in landscape if you're viewing on your phone or tablet.

Designed for *DIY*

Our Café Curtains are designed to be installed by you, without specialist fitters, even if you don't have much DIY experience.


Please read each page of this guide carefully during installation, following along one step at a time.

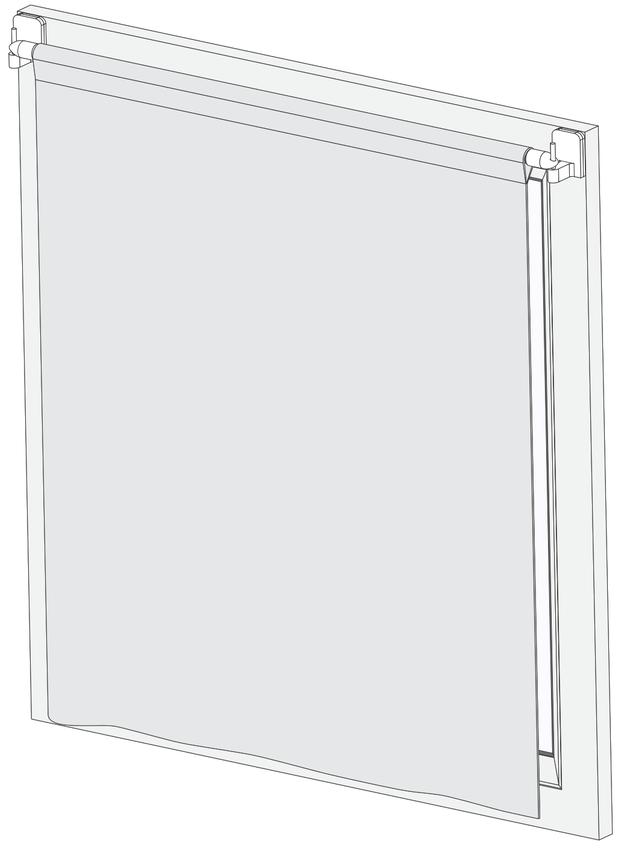


Section 1 *Parts*

Parts included *in your order:*

1. **Café Curtain**
2. **Extendable rod**
3. **Stick on brackets**

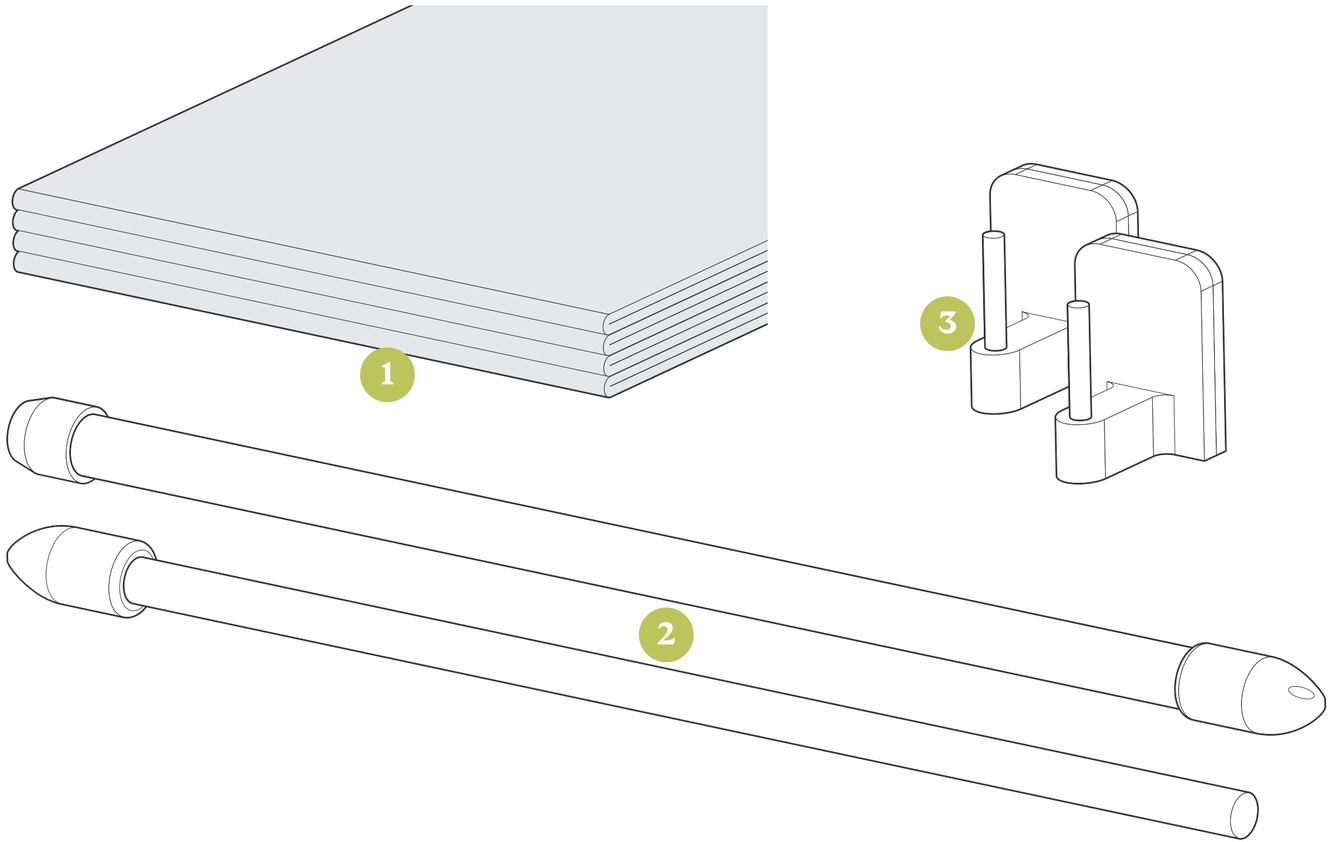



Section 2 *Installing the Curtain*

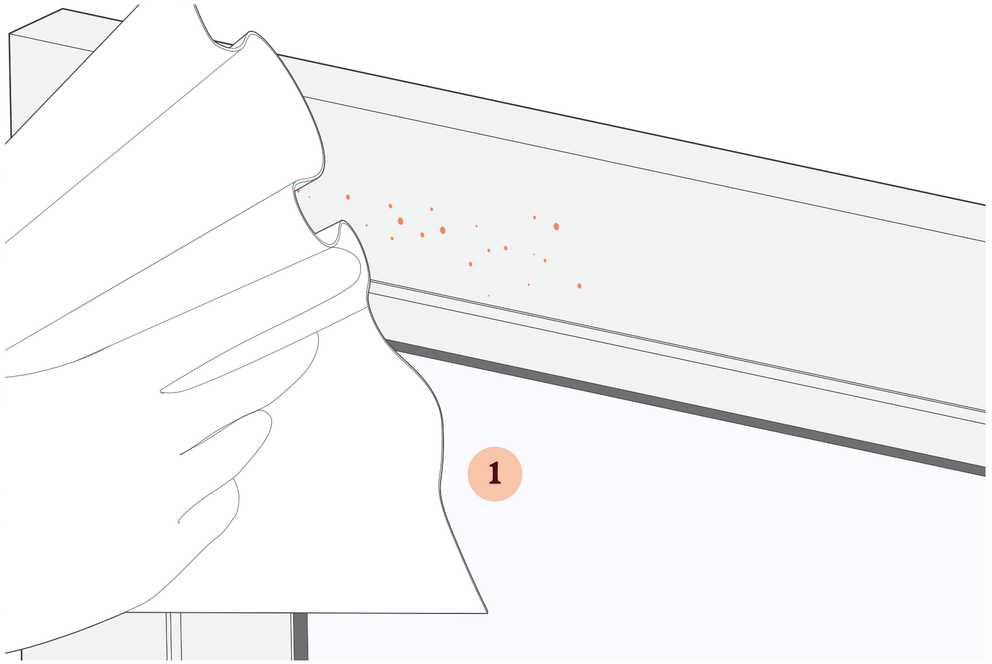


Use soapy water and a cloth, then the alcohol wipes provided, to clean the frame, especially across the top (1). The cleaner the surface, the better the brackets will adhere, so make sure it's entirely free of any dirt or dust. ***Leave until the frame is fully dry before moving onto the next step.***

Section 2 *Installing the Curtain*

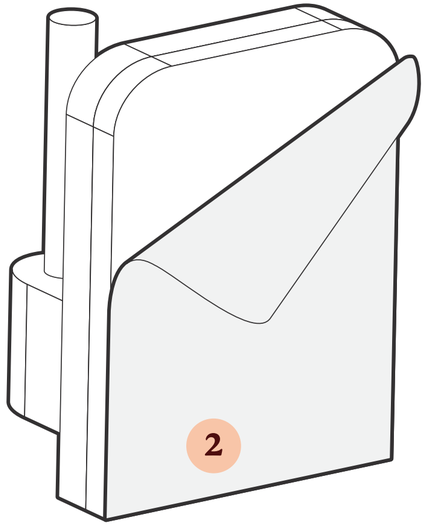

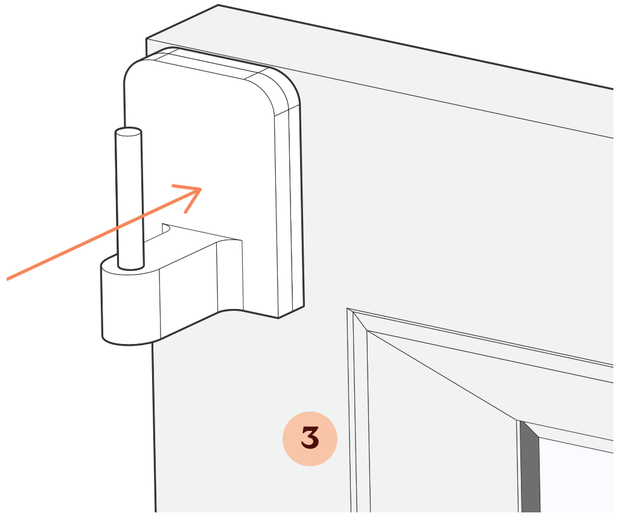


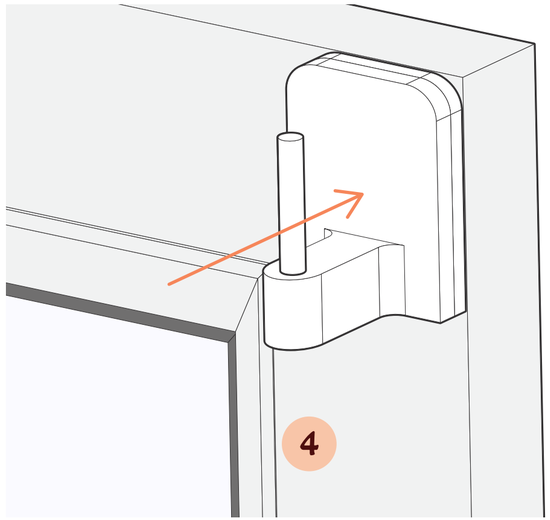

Starting with one bracket, remove the protective film from the adhesive on the back (2). Carefully apply the bracket directly to the window frame, in the top corner (3). Hold it in place for about 30 seconds to let the adhesive bond. Then repeat the process with the other support on the other side of the window (4), making sure both are level.


Top Tip


Leave the brackets in place for at least 30 minutes before hanging the curtains. This way, the adhesive will have enough time to set properly and will prevent any shifting during the next steps.

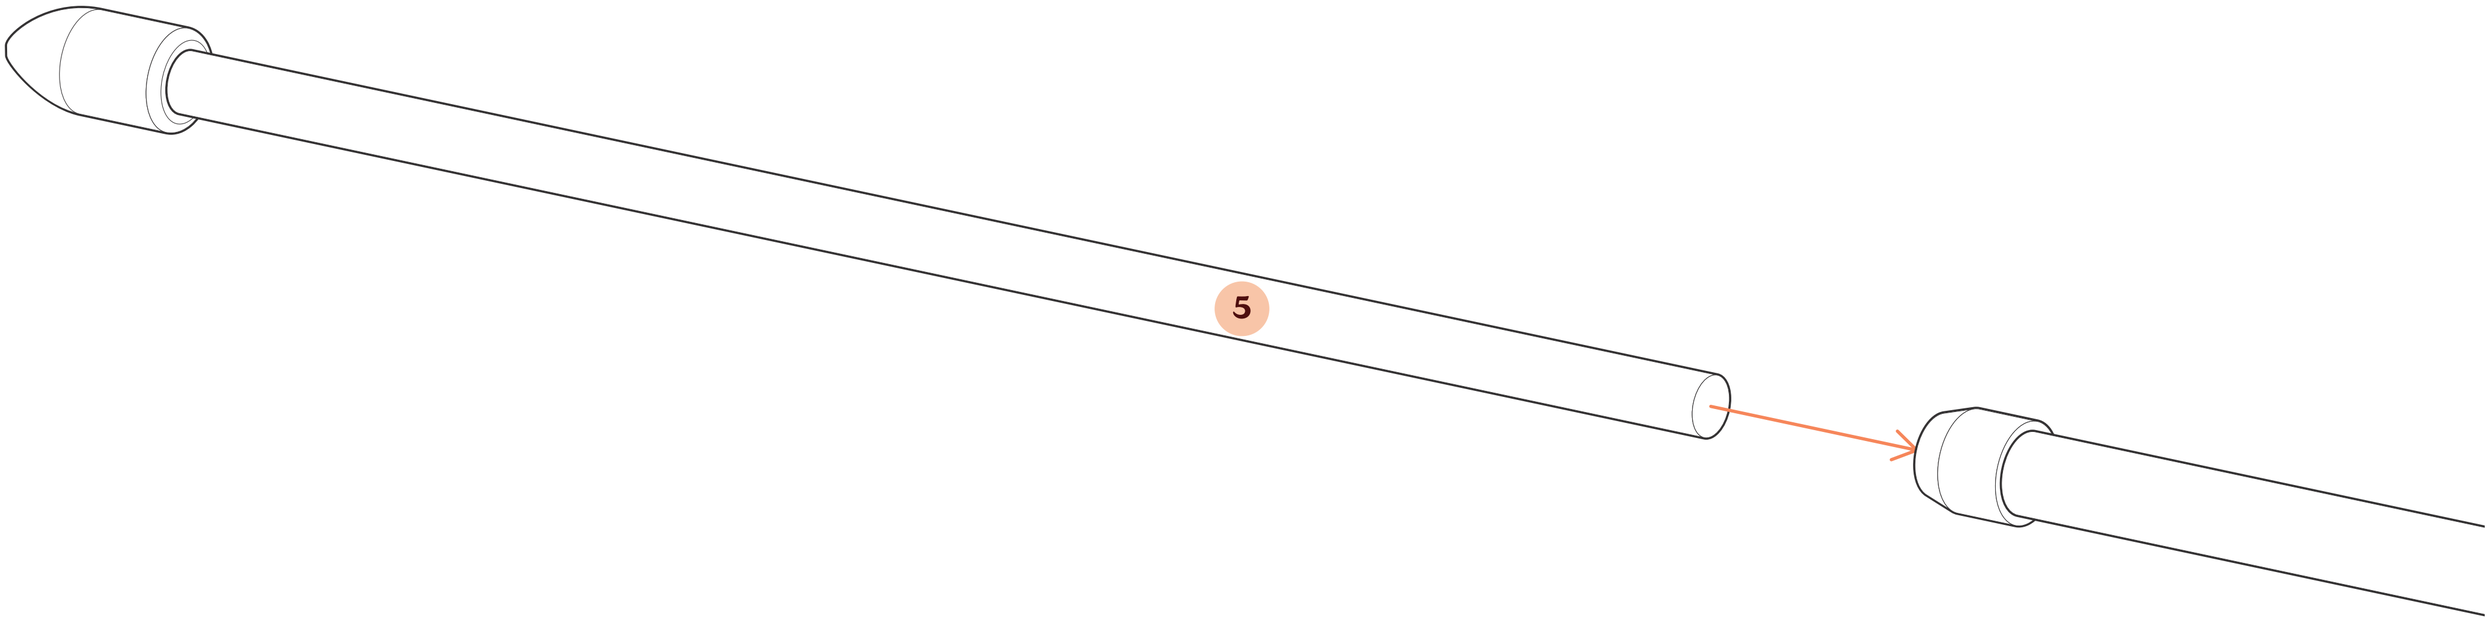

Insert the thinner part of the telescopic rod into the fitting of the other half of the rod to join the two sections (5).

Section 2 *Installing the Curtain*

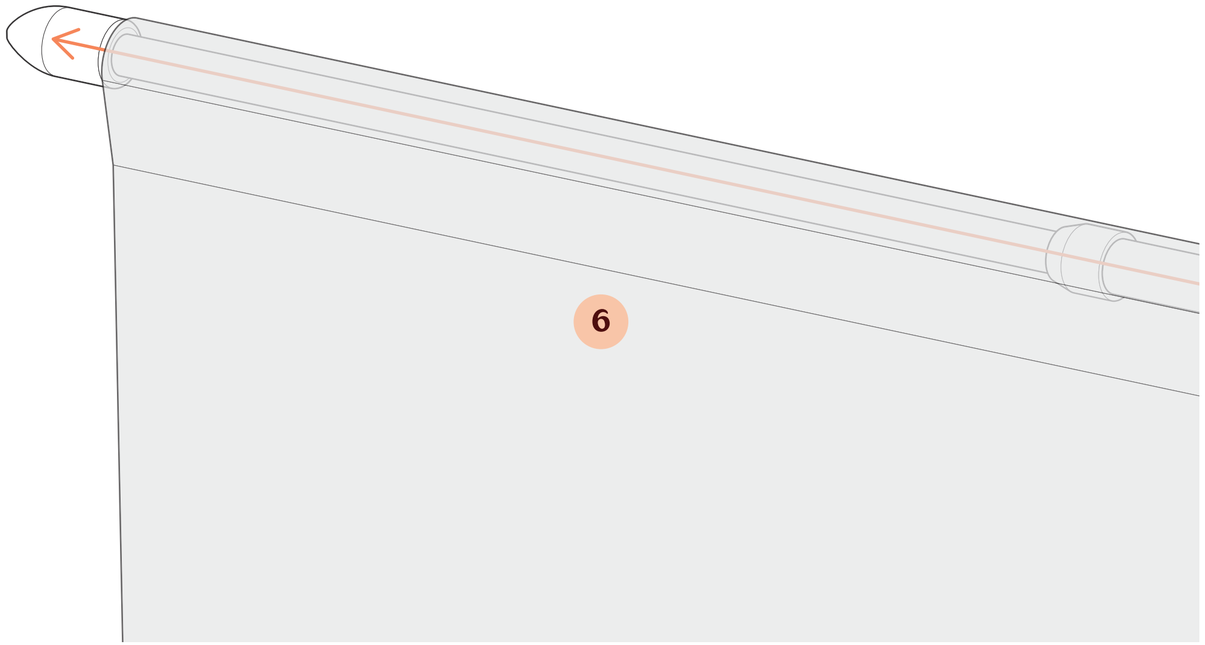

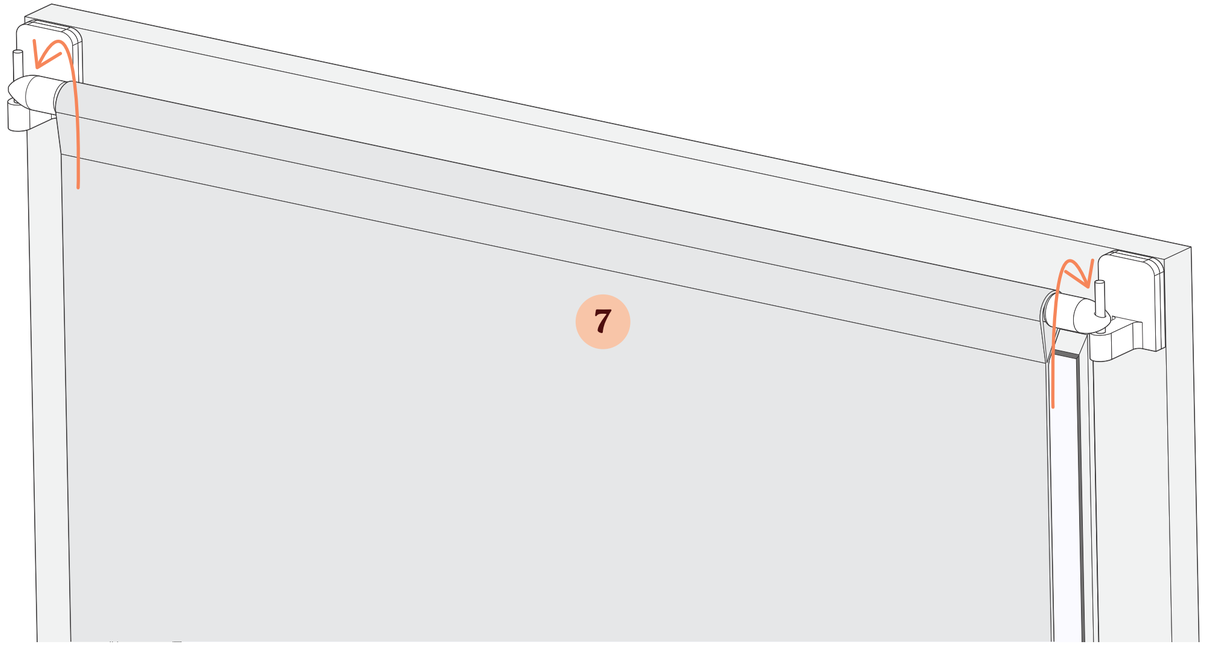

Open the curtain and slide the rod through the top heading (6). Slot the ends of the rod onto the brackets to complete the installation (7).